


PMH 8064
6.5" open frame monitor
1000-nits high brightness LCD

User Manual

PMH 8064: 6.4" industrial High-Brightness open frame LCD monitor

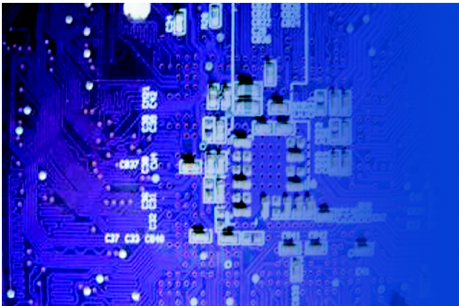

PMH 8064
6.5" open frame monitor
1000-nits high brightness LCD

Table of Contents

CHAPTER 1 Introduction

1-1	Important Safeguards.....	1
1-2	Before Installation.....	2
1-3	Unpacking.....	2
1-4	Optional Accessories.....	2

CHAPTER 2 Front Aluminum LCD Panel

2-1	Package Contents.....	3
2-2	Structure Diagram.....	4
2-3	Mounting Method.....	5

CHAPTER 3 Connection

3-1	On-Screen Display Operation.....	7
3-2	On-Screen Menu.....	9

CHAPTER 4 Operation

4-1	LCD Specifications.....	11
-----	-------------------------	----

CHAPTER 5 AV/BNC Options

5-1	AV/BNC Options.....	12
-----	---------------------	----

CHAPTER 6 Touchscreen Options

6-1	Touchscreen Options.....	13
6-2	Touchscreen Quick User Guidelines.....	15

CHAPTER 7 DC Power Options.....18


CHAPTER 8 TV Turner Options

8-1	How to Use Remote controller.....	19
-----	-----------------------------------	----

CHAPTER 9 Audio Input Options.....21

CHAPTER 10 Troubleshooting.....22

CHAPTER 11 Cleaning the LCD Display.....24

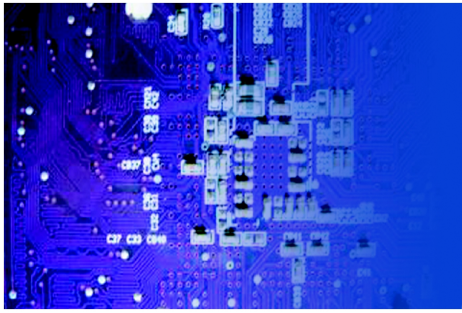

PMH 8064
6.5" open frame monitor
1000-nits high brightness LCD


CHAPTER 1 INTRODUCTION

1-1 Important Safeguards

Please read all of these instructions carefully before you use the device. Save this manual for future reference.

What the warranty does not cover:

- Any product, on which the serial number has been defaced, modified or removed.
- Damage, deterioration or malfunction resulting from:
 - Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
 - Repair or attempted repair by anyone not authorized by us.
 - Any damage of the product due to shipment.
 - Removal or installation of the product.
 - Causes external to the product, such as electric power fluctuation or failure.
 - Use of supplies or parts not meeting our specifications.
 - Normal wear and tear.
 - Any other causes which does not relate to a product defect.
- Removal, installation, and set-up service charges.

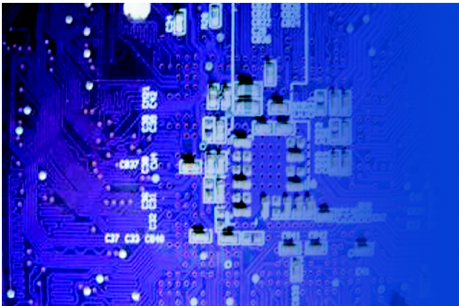

PMH 8064 6.5" open frame monitor 1000-nits high brightness LCD

1-2 Before Installation

- It is very important to locate the LCD Display in a suitable environment.
- The surface for placing and fixing the LCD Display should be stable.
- Make sure the place has good ventilation, is out of direct sunlight, away from sources of excessive dust, dirt, heat, water, moisture and vibration.
- Convenience for connecting the LCD Display to the related facilities should be well considers too.

1-3 Unpacking


The LCD Display comes with the standard parts shown on the package contents. Check and make sure they are included and in good condition. If anything is missing, or damage, contact the supplier immediately.

1-4 Optional Accessories

1. Power Cord

- 1.1 IEC power cord
- 1.2 NEMA 5-15 power cord (US)
- 1.3 BS 1363 power cord (UK)
- 1.4 CEE 7/4 power cord (German)
- 1.5 AS 3112 power cord (Australia)




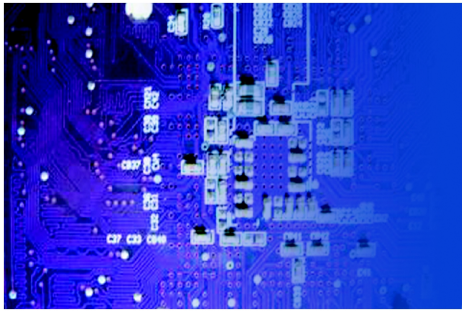

PMH 8064
6.5" open frame monitor
1000-nits high brightness LCD

CHAPTER 2 FRONT ALUMINUM LCD PANEL

2-1 Package Contents

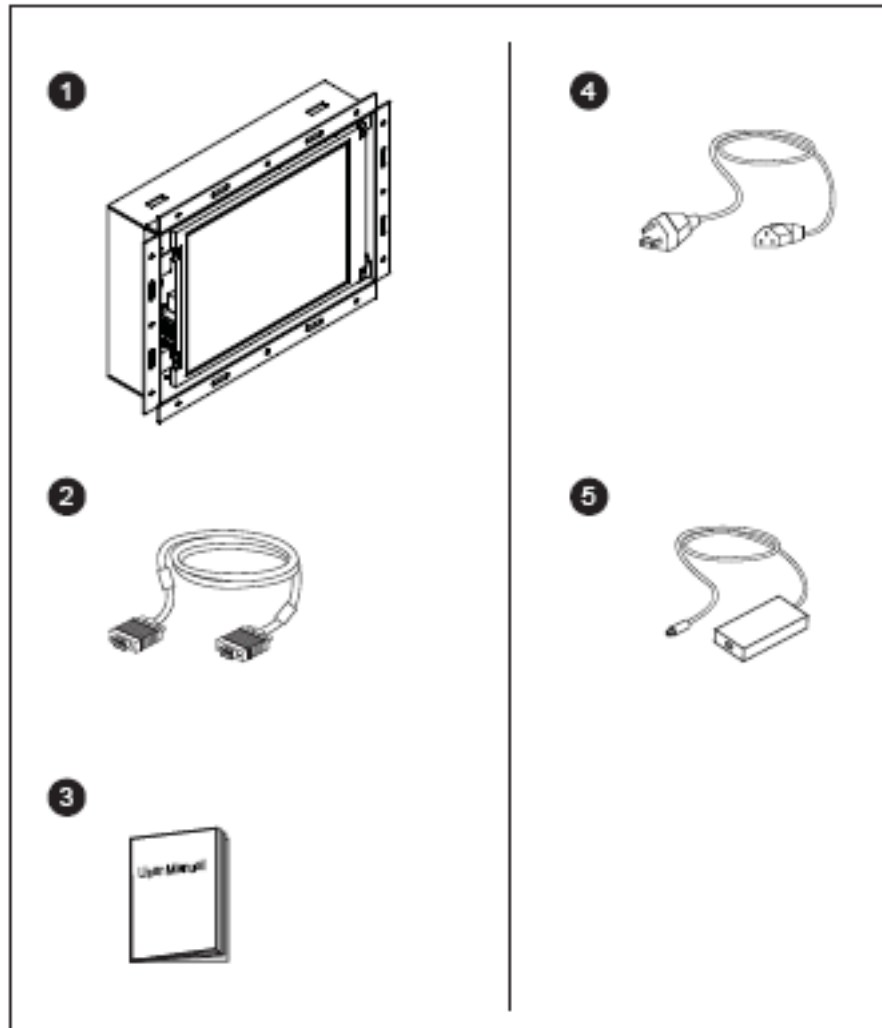


1. LCD Display x 1 pc
2. 6" VGA Cable (male to male) x 1 pc
3. User Manual x 1 pc
4. Power Cord x 1 pc

5. Auto switch Power Adapter x 1 pc



PMH 8064
6.5" open frame monitor
1000-nits high brightness LCD

2-2 Structure Diagram

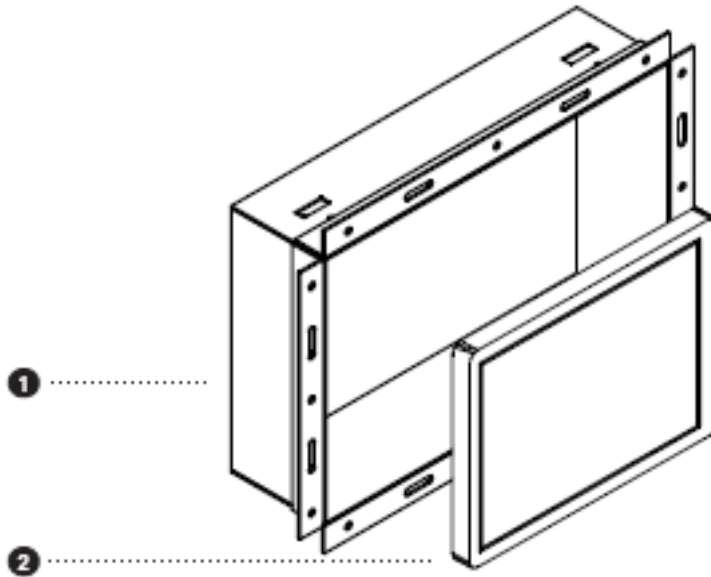


Front View

Rear View

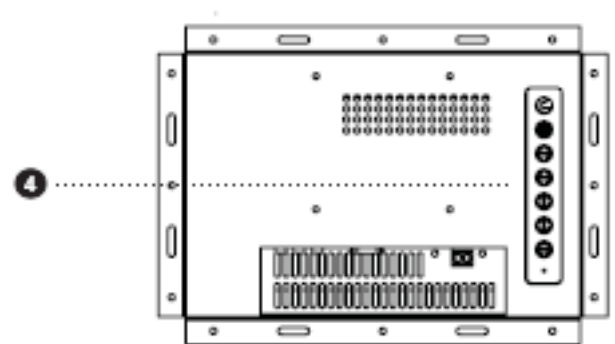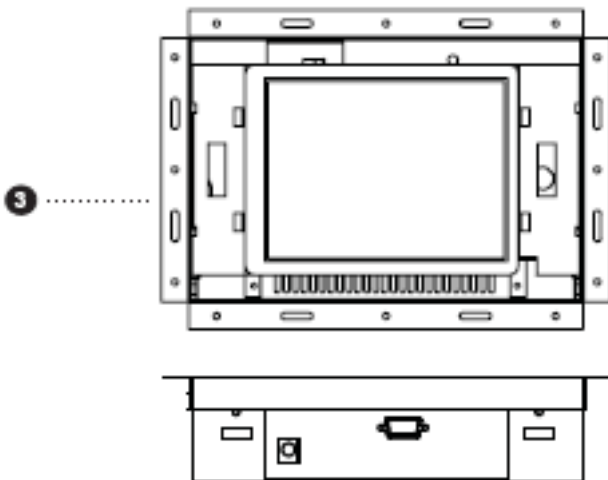

1. Rear Case
2. Class A TFT LCD Panel
3. Universal open frame mounting
4. LCD Membrane

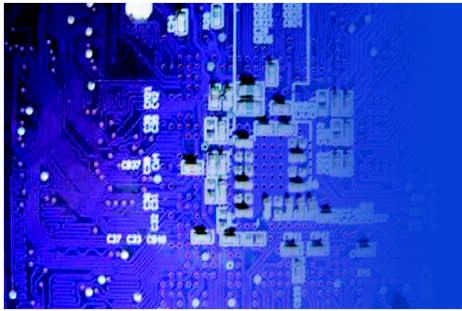

PMH 8064 6.5" open frame monitor 1000-nits high brightness LCD

2-3 Mounting Method Bracket Mounting

1



x 4 pcs



Mounting bracket

2



x 4 pcs


M4*50mm screw

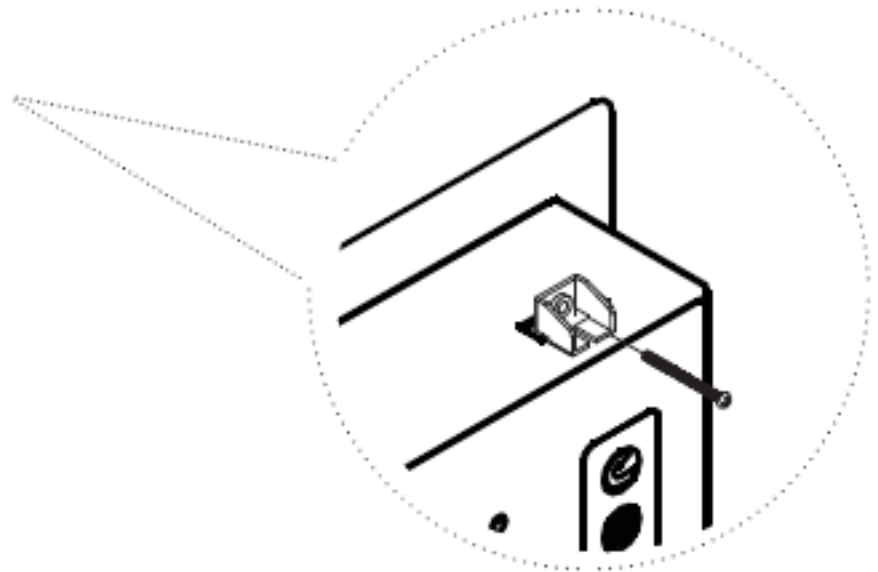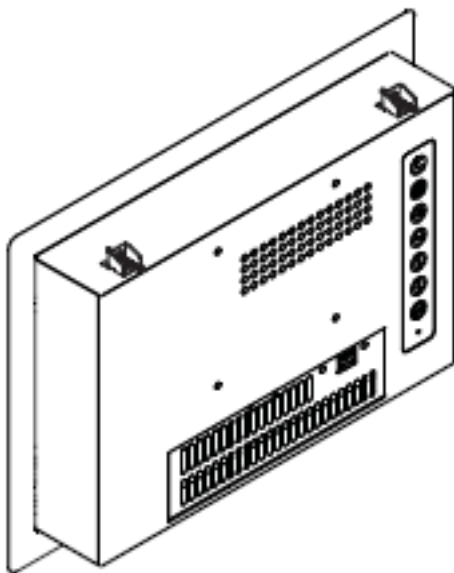

**Remarks: hardware for fixing the LCD display is not provided


PMH 8064
6.5" open frame monitor
1000-nits high brightness LCD

Universal open frame mounting:

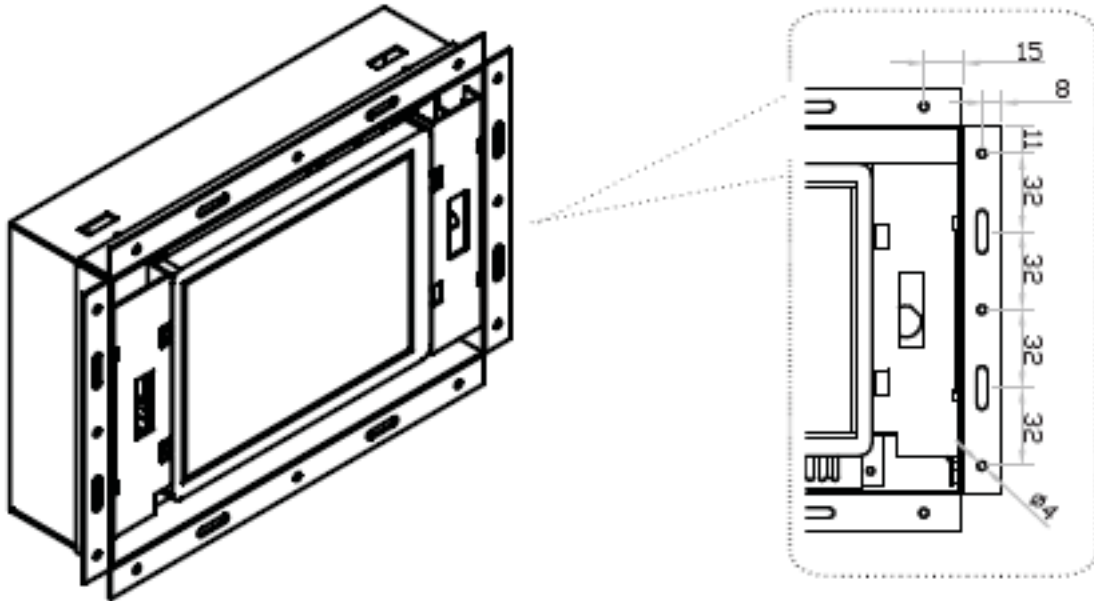


**Remarks: hardware for fixing the LCD display is not provided

75mm VESA Standard:

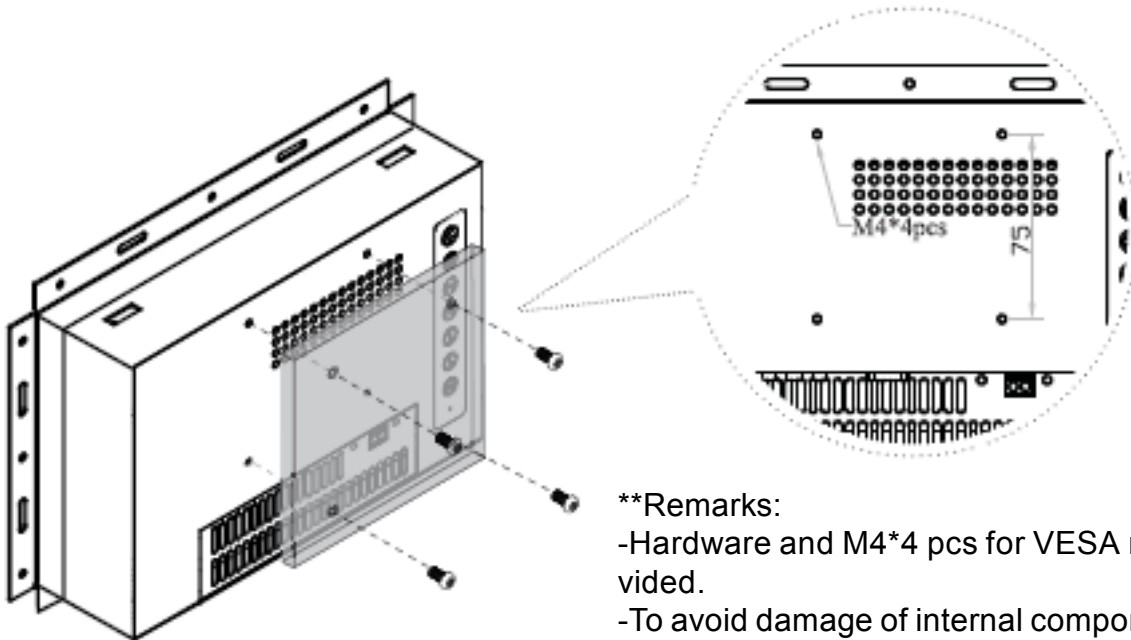


**Remarks:

- Hardware and M4*4 pcs for VESA mouting is not provided.
- To avoid damage of internal componenets, when mounting the VESA bracket, do not use screws that exceed the depth (6mm) of the display mounting holes. Using screws that are too long may cause damage to the display.

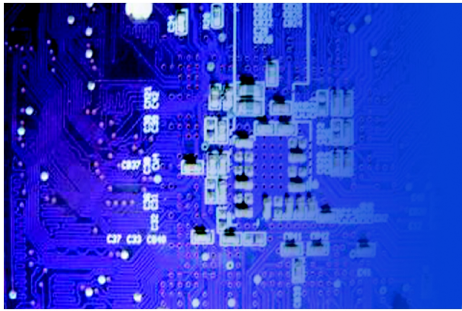


PMH 8064
6.5" open frame monitor
1000-nits high brightness LCD

CHAPTER 3 CONNECTION

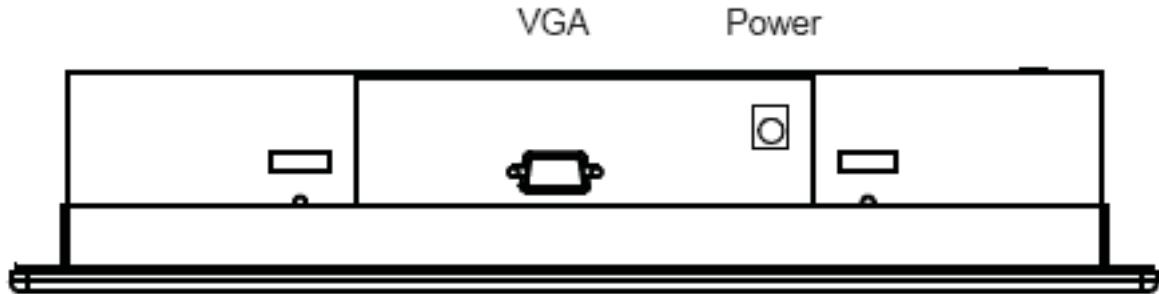

Caution : The LCD Display are hot-pluggable, but components of connected devices may not be hot-pluggable. Plugging and unplugging cables while connected devices are powered on may cause irreversible damage of the devices and LCD Display. Before attempting to connect anything to the LCD Display, we suggest that turn off power to all devices before connecting them. Apply power to connected devices again only after the LCD Display receiving power. The company is not responsible for damage caused in this way.



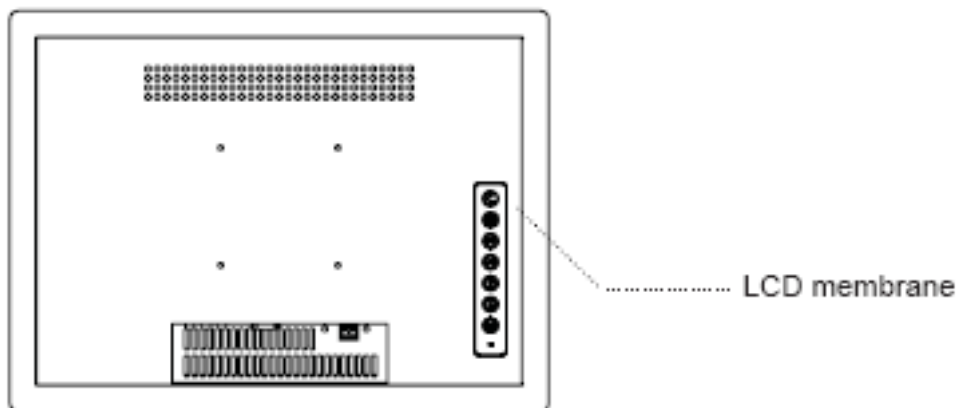



3-1 On-Screen Display Operation




PMH 8064


6.5" open frame monitor

1000-nits high brightness LCD

Membrane Switch	Function
	Power light Green = On Orange = Power saving
	Power on / off LCD
	Display the OSD menu
	Scrolls through menu options and adjusts the displayed control (To auto adjustment by pressing the button  for 5 seconds)
	Exit the OSD screen Toggle analog, digital & video connection (DVI-D and video options only)

3-2 On-Screen Menu

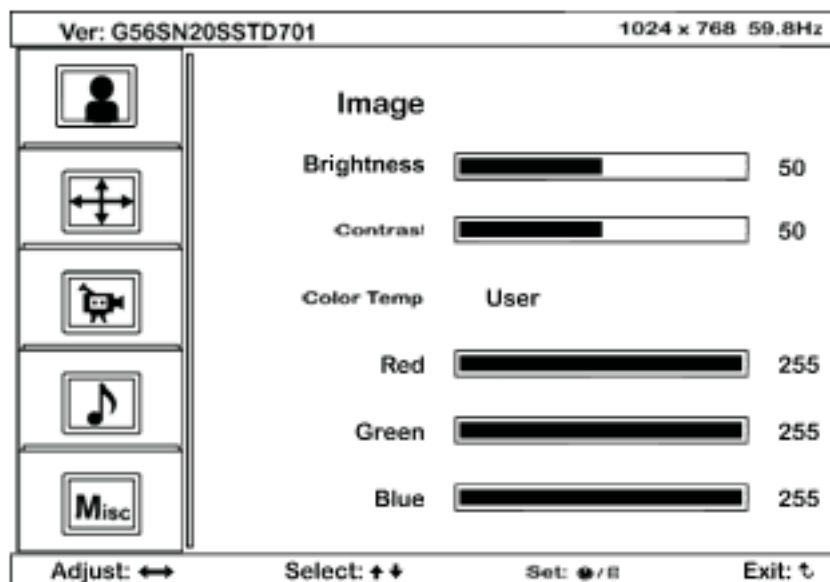

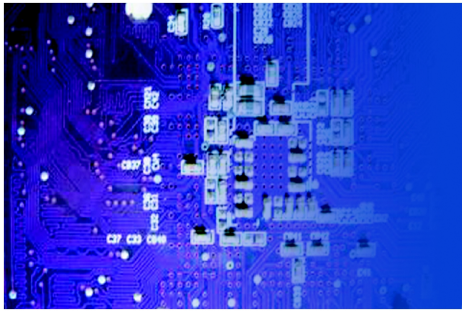

PMH 8064 6.5" open frame monitor 1000-nits high brightness LCD

**Image:**

To enter into the brightness, contrast, color temp, red, green, and blue

**Geometry:**


To enter into the auto adjust, H position, V position, phase and clock

**Video:**


To enter into the colour, tint, sharpness, noise reduction, DCDi and TV Setup

**Audio:**

To enter into volume, bass, treble, balance, AVL and mute

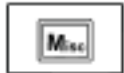**Misc:**

To enter into the language, OSD position, graphic mode, ratio, reset and timer

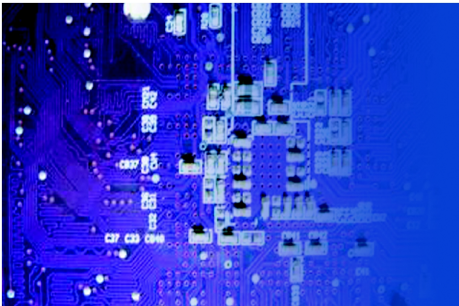

PMH 8064
6.5" open frame monitor
1000-nits high brightness LCD

CHAPTER 4 OPERATION

4-1 LCD Specifications

Item	Description
LCD Manufacturer	AUO
Diagonal Size	6.5" TFT
Max. Resolution	640 x 480
Brightness (cd/m ²)	1000
Color Support	262K
Contrast Ratio (typ.)	550:1
Viewing Angle (H/V)	140° x 120°
Display Area (mm)	132 x 99
Tr Response Time (ms)	15
LCD Panel MTBF (hrs)	70,000
Display Input Signal	Analog RGB
Connector	DB-15 connector
Power Input	Auto-sensing 100 to 240VAC, 50 / 60Hz
Power Consumption	Max. 48 Watt, Standby 5 Watt
Compatibility	Multi-platform - Mix PCs, SUNs, IBMs, HPs & DELLs.

Options

Graphic Input	S-Video & BNC input
DC Power	DC power input with 12V, 24V, 48V selection
Touchscreen	Resistive and capacitive


Environmental

Operation	0° to 50°C Degree
Storage	-5° to 60°C Degree
Relative Humidity	5~90%, non-condensing
Shock	10G acceleration (11ms duration)
Vibration	5~500Hz 1G RMS random vibration

PMH 8064
6.5" open frame monitor
1000-nits high brightness LCD

CHAPTER 5 AV/ BNC OPTIONS

5-1 AV/BNC Options

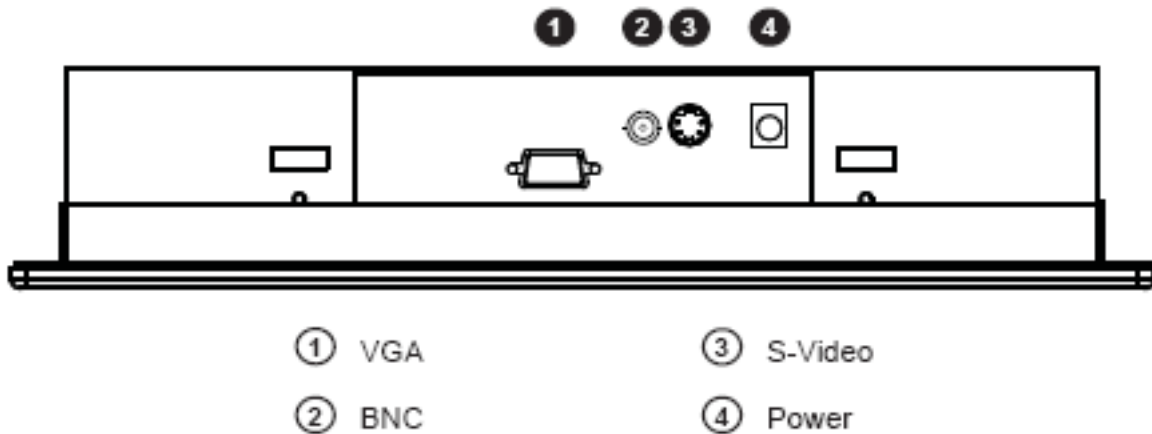


** Remarks: Package includes 1x 6ft S-Video cable

PMH 8064
6.5" open frame monitor
1000-nits high brightness LCD


CHAPTER 6 TOUCHSCREEN OPTIONS


6-1 Touchscreen Options

USB interface

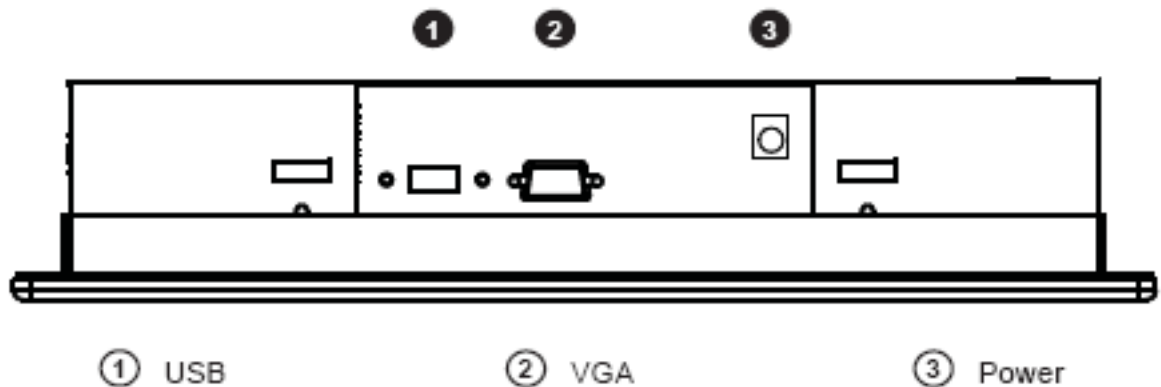

Serial interface

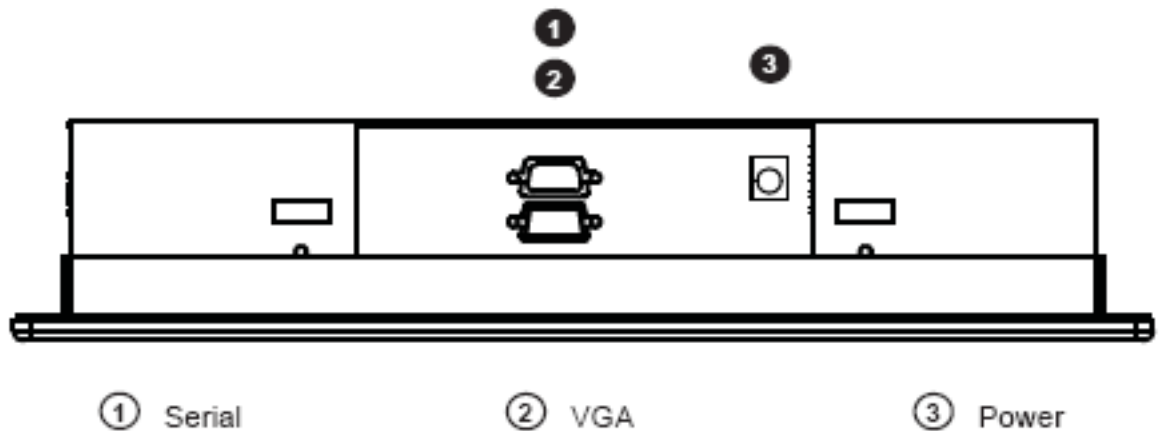

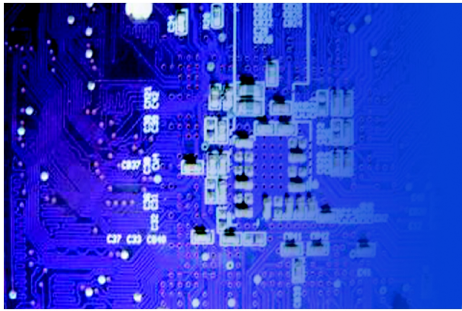

PMH 8064 6.5" open frame monitor 1000-nits high brightness LCD

e-Resistive


Model	-6TRB / -6TRS
Screen size	6.5"
Interface	USB / serial
Optical transmittance	80% ± 3%
Surface hardness	≥3H (JIS K5400)
Operating system	Windows 98 / 2000 / ME / XP / NT / CE, DOS, Linux

e-Capacitive

Model	-6TCB / -6TCS
Screen size	6.5"
Interface	USB / serial
Optical transmittance	93% ± 2%
Surface hardness	>9H Surface hardness, withstand over 300 million touches
Operating system	Windows 98 / 2000 / ME / XP / NT / CE, DOS, Linux

** Remarks:

- USB touchscreen package includes 1 x 6ft USB cable, quick reference guideline and CD disc
- Serial touchscreen package includes 1 x 6ft serial cable, quick reference guideline and CD disc
- For detailed information, please refer to the attached CD disc
- As the touchscreen unit is not made of toughened glass, please handle it carefully

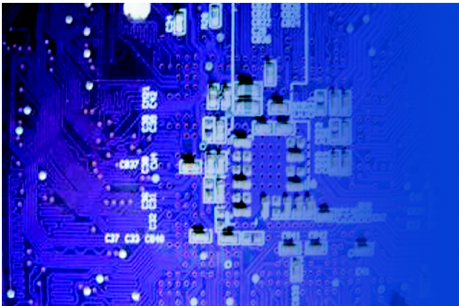


PMH 8064 6.5" open frame monitor 1000-nits high brightness LCD

6-2 Touchscreen Quick User Guidelines

Calibration:


Tool property page- Calibration, draw test tools and the linearity curve of the touchscreen were list in this property page shown as below for user to do touchscreen calibration and touch position test.

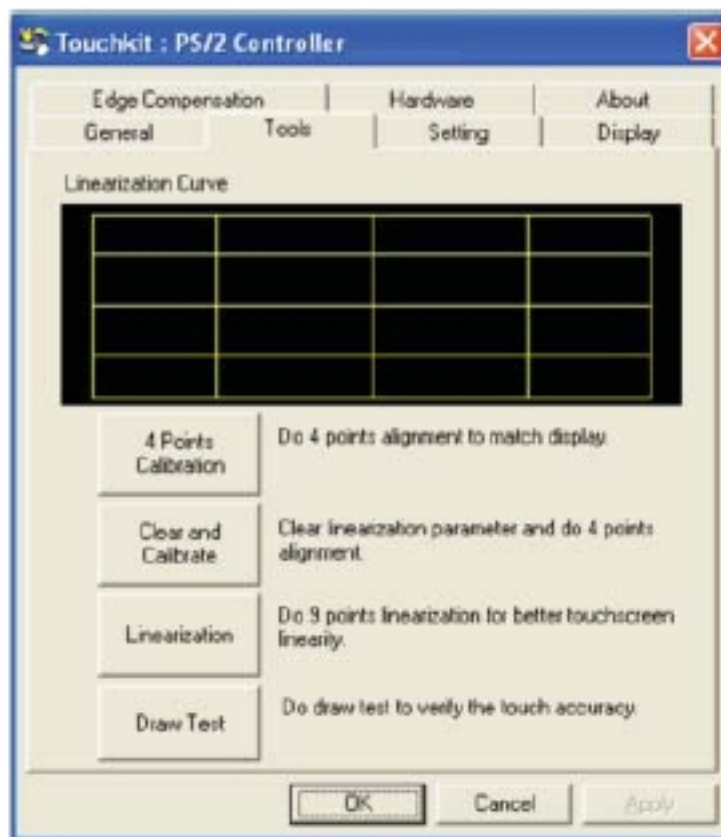

User can do calibration or draw test by pressing the function push buttons.

1. Linearization Curve

Linearization curve of the touchscreen is list in this page for reference and trouble shooting purpose.

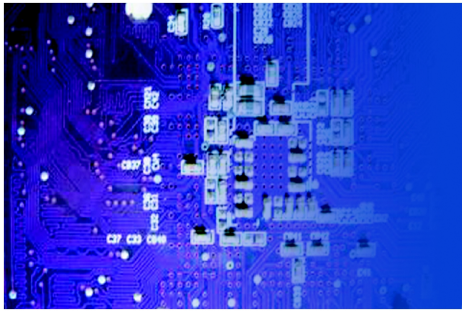


PMH 8064 6.5" open frame monitor 1000-nits high brightness LCD

2. 4 points calibration

It needs calibration before the touchscreen can work accurately. Whenever the user feel the accuracy lost, user can do calibration again to get a more accuracy touch function.

Pressing this button, a new window will be popped-up at the location when the touchscreen was mapped to area for this touch system to guide the user do 4 points calibration.

User should follows the guide to touch and hold the blinking X symbol in the calibration window until it does not blink to make sure that the utility can gather enough data for computation. In addition, a time line bar is shown in the bottom of the window to indicate time elapsed. If the touchscreen was not touched before the time line bar going to right end, the calibration task will be terminated automatically.

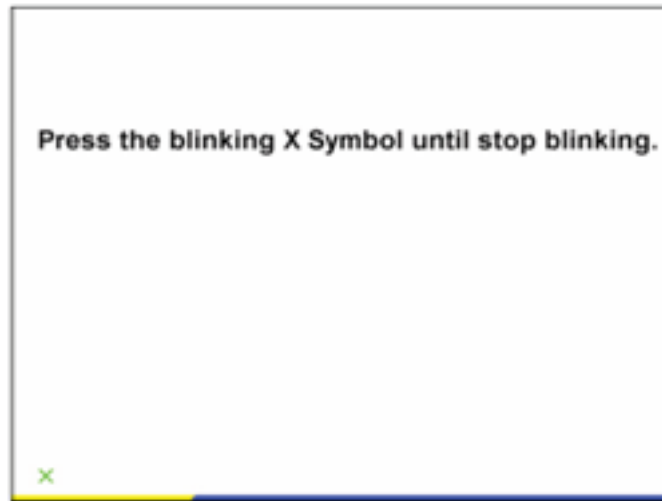


3. Clear and Calibration

Press this button to erase the 25 points calibration/linearization parameters and force user to do 4 points calibration again. After 25 points calibration data was clear, the 4 points calibration data will be invalid. It needs to do 4 points calibration.

4. Linearization

Linearization (25 or 9 points calibration) function is used to compensate the touchscreen linearity. After linearization completed, the linearity of the touchscreen will be shown in the Linearity curve window.

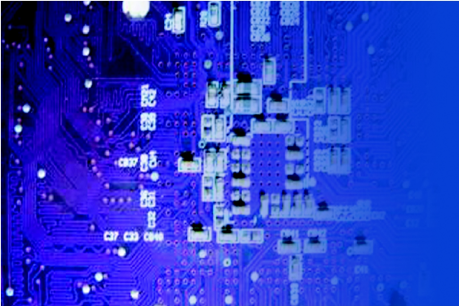


PMH 8064 6.5" open frame monitor 1000-nits high brightness LCD

Pressing this button, a new window will be popped-up at the location when the touchscreen was mapped to area for this touch system to guide the user do 25 points calibration. User should follows the guide to touch and hold the blinking X symbol in the calibration window until it does not blink to make sure that the utility can gather enough data for computation. In addition, a time line bar is shown in the bottom of the window to indicate time elapsed. If the touchscreen was not touched before the time line bar going to right end, the calibration task will be terminated automatically.

5. Draw Test

This function is used for accuracy and performance check. Press this button and a new pop up window will be popped up in the location where the touchscreen was mapped to the touch system as below,

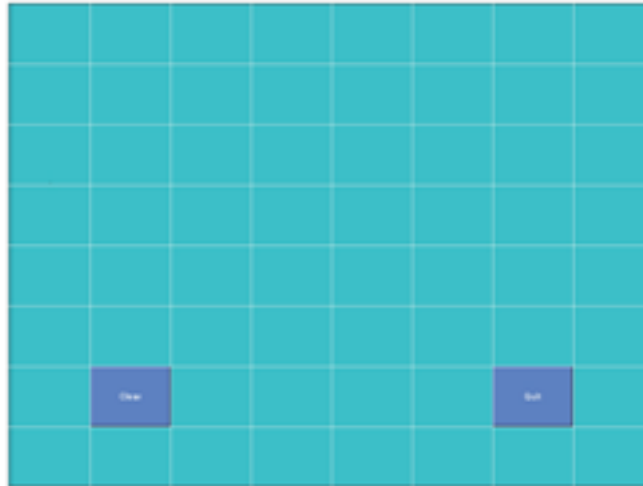


User can press the Clear button to clear the window. Press Quit button to terminate this draw test.




Caution :

- At the first assembly of touch screen, we suggest applying 25 points calibration.
 - For a more accurate calibration of touch screen, please apply 25 points calibration.
-

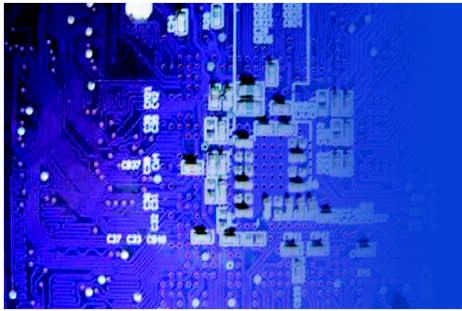

PMH 8064
6.5" open frame monitor
1000-nits high brightness LCD

CHAPTER 7 DC POWER OPTIONS

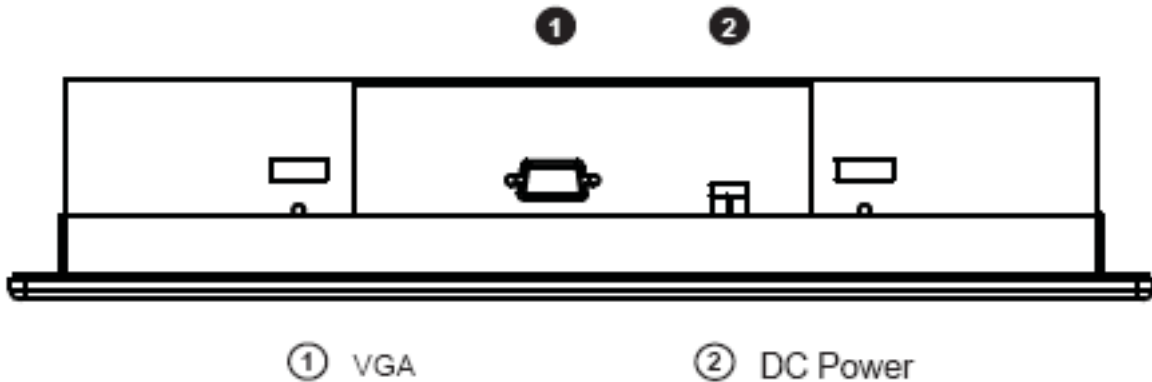


Model	12V	24V	48V
Input rating			
Input voltage:	12-Volt	24-Volt	48-Volt
Input range:	9 ~ 18V	18 ~ 36V	36 ~ 75V
Input current			
- No load	50 mA	50 mA	50 mA
- Full load	4950 mA	2450 mA	1220 mA
Output rating			
Output voltage:	12-Volt	12-Volt	12-Volt
Output current:	4.16A	4.16A	4.16A
Efficiency	84%	85%	85%

** Remarks: Package does not include power cord and AC power adapter


PMH 8064
6.5" open frame monitor
1000-nits high brightness LCD

CHAPTER 8 TV TURNER OPTIONS

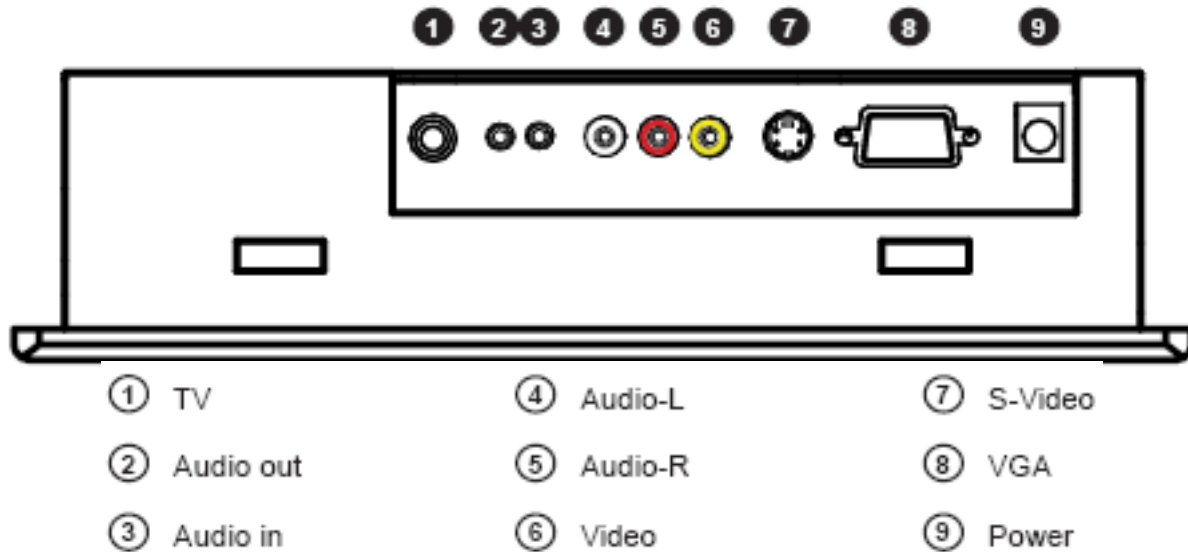

** Remarks: Package includes 1 x remote controller

8-1 How to use Remote Controller

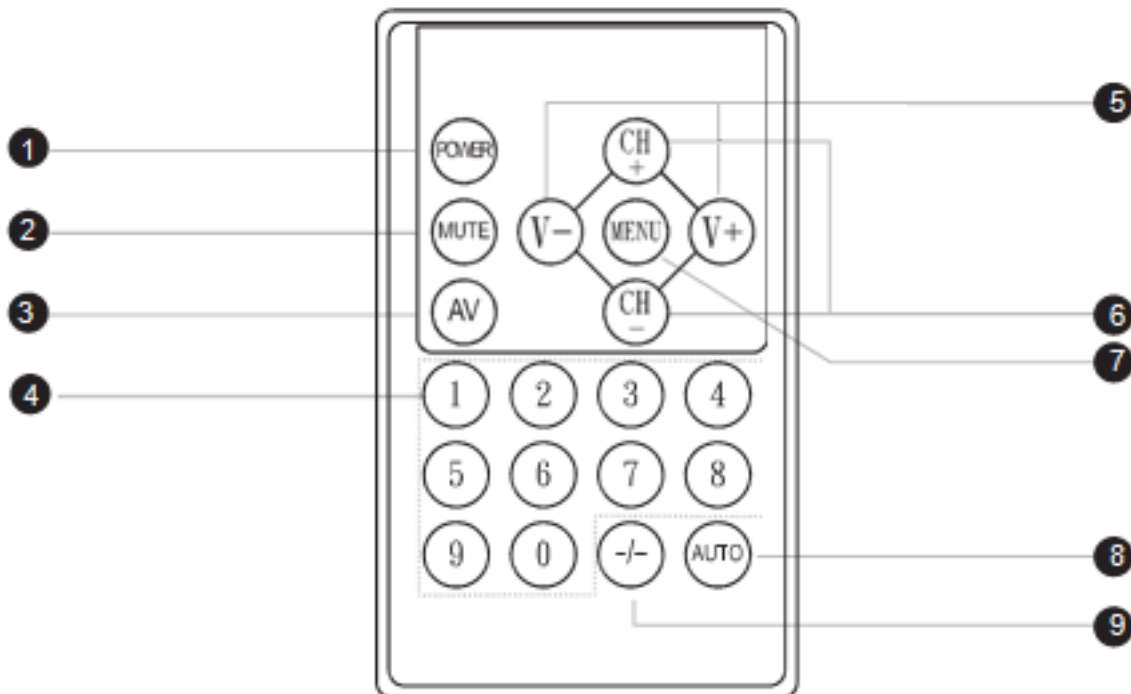



PMH 8064 6.5" open frame monitor 1000-nits high brightness LCD

①	POWER	Switches on or off the TV
②	MUTE	Turn on or off the speaker
③	AV	Switch to AV mode
④	0-9	Select channels. For channel numbers 10 and above, enter the second digit within two seconds.
⑤	V +/-	Increase or decrease the speaker volume
⑥	CH +/-	Increase or decrease the channel number
⑦	MENU	Display the menu on the screen or go to the previous menu
⑧	AUTO	For auto searching
⑨	-/-	For setting one or two input digit





Caution: ■ The Company reserves the right to modify product specifications without prior notice and assumes no responsibility for any error which may appear in this web page.




PMH 8064
6.5" open frame monitor
1000-nits high brightness LCD

CHAPTER 9 AUDIO INPUT OPTIONS

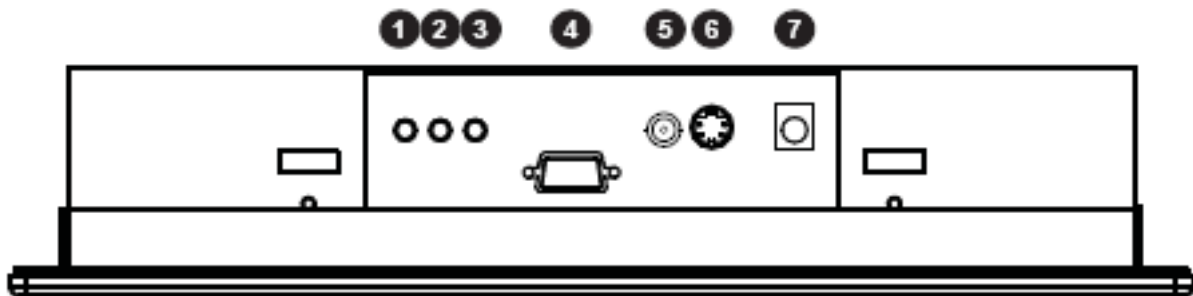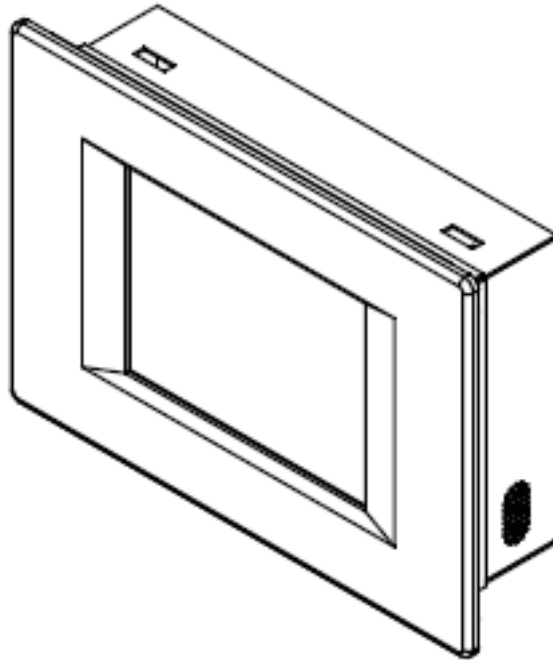

- | | |
|-------------------|-----------|
| ① Video Audio out | ⑤ BNC |
| ② Video Audio in | ⑥ S-Video |
| ③ PC Audio in | ⑦ Power |
| ④ VGA | |

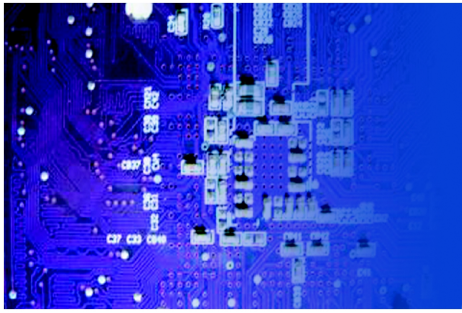

PMH 8064
6.5" open frame monitor
1000-nits high brightness LCD

CHAPTER 10 TROUBLESHOOTING

1. How do I adjust the resolution?

To change monitor resolution, click Start -> Control Panel -> Display. Select Setting tab to adjust the monitor resolution in Desktop Area. The available resolutions, "640 x 480", "800 x 600", "1024 x 768", "1152 x 864", "1280 x 1024", are determined by the display card in your computer.


2. Is interference signal appeared on LCD normal when shutting down the computer ?

In rare cases, interference may appear on the monitor. This may be caused by signal rate of VGA card and is considered normal. The image quality can be improved by adjusting the phase or pixel rate automatically or manually.

3. The membrane power light is not ON

Press the power On / Off on LCD membrane to check if the monitor is in the ON mode. Check the power cord is properly connected to the LCD keyboard drawer and power outlet.

4. Screen image is not centered or sized properly

Press the  button for two seconds to automatically adjust the image. Adjust the H-position and V-position settings via On-screen menu.

5. Must calibration be down after installation completed?

After connecting your touch monitor and installing the software, you must calibrate the touchscreen. Calibration serves two purposes:

- (A) Set the active area of the touchscreen.
- (B) Align the touchscreen's active area to the underlying video.

6. The touchscreen is not accurate

Calibration should be required.

Make sure to touch the centre of each X once at a time.

7. The touchscreen is accurate in most areas, but off a lot in certain area


The touchscreen may have linearity problems. Please use touch screen and select more points calibration.



PMH 8064
6.5" open frame monitor
1000-nits high brightness LCD

8. Why can the display not match to the touchscreen correctly after calibration?

The touchscreen will be aged after a certain period of consumption or under harsh environment. It is normal. The touchscreen driver has an utility to adjust the situation. The calibration point can be more on the touch screen.

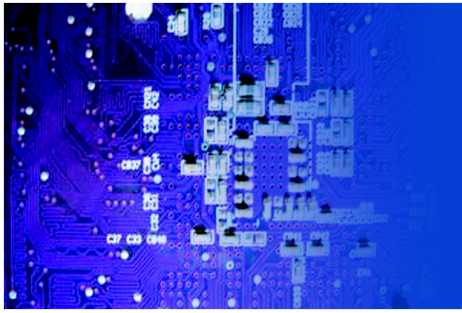

PMH 8064
6.5" open frame monitor
1000-nits high brightness LCD

CHAPTER 11 CLEANING THE LCD DISPLAY

You may need the following precautions before you begin to clean the LCD display, please read and understand the details below fully.

1. Make sure the monitor is turned off
2. Never spray or pour any liquid onto the screen directly
3. To remove dust and other particles, wipe the screen with a clean, soft, lint-free cloth.
4. Be cautions of all kinds of cleaning solvents or chemicals, some individuals may be harmful to the LCD display.
5. If the LCD display is still not clean enough, apply a small amount of non-ammonia, non-alcohol based glass cleaner onto a clean, soft, lint-free cloth, and wipe the screen.
6. Don't use water or oil on the monitor directly.